

RICOH

Aficio

850/1050

Operating Instructions

SYSTEM SETTINGS

Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.



RICOH COMPANY, LTD.

15-5, 1 chome, Minami-Aoyama, Minato-ku, Tokyo
Telephone: Tokyo 3479-3111

Overseas Affiliates

U.S.A.

RICOH CORPORATION
5 Dedrick Place
West Caldwell, New Jersey 07006
Phone: +1-973-882-2000

The Netherlands

RICOH EUROPE B.V.
Groenelaan 3, 1186 AA, Amstelveen
Phone: +31-(0)20-5474111

United Kingdom

RICOH UK LTD.
Ricoh House,
1 Plane Tree Crescent, Feltham,
Middlesex, TW13 7HG
Phone: +44-(0)181-261-4000

Germany

RICOH DEUTSCHLAND GmbH
Mergenthalerallee 38-40,
65760 Eschborn
Phone: +49-(0)6196-9060

France

RICOH FRANCE S.A.
383, Avenue du Général de Gaulle
BP 307-92143 Clamart Cedex
Phone: +33-(0)1-40-94-38-38

Spain

RICOH ESPAÑA S.A.
Avda. Litoral Mar, 12-14,
08005 Barcelona
Phone: +34-(0)93-295-7600

Italy

RICOH ITALIA SpA
Via della Metallurgia 12,
37139 Verona
Phone: +39-045-8181500

Hong Kong

RICOH HONG KONG LTD.
23/F., China Overseas Building,
139, Hennessy Road,
Wan Chai, Hong Kong
Phone: +852-2862-2888

Singapore

RICOH ASIA PACIFIC PTE.LTD.
260 Orchard Road,
#15-01/02 The Heeren,
Singapore 238855
Phone: +65-830-5888

Atiício 850/1050 Operating Instructions

Printed in The Netherlands

EE (GB) A295-8600

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Notes

Some illustrations might be slightly different from your machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Operator Safety:

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains a GaAlAs four beam laser diodes array, 10-milliwatt, 770-810 nanometer wavelength for each emitter. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is located on the internal cover that is revealed when the front cover is opened.



Laser Safety:

The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser sub-systems to the factory or service depot when replacement of the optical subsystem is required.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see ⇒ P.2 "Machine Types")

- Type 1 : Aficio 850
- Type 2 : Aficio 1050

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, Ricoh recommends that you use genuine Ricoh toner.

Ricoh shall not be responsible for any damage or expense that might result from the use of parts other than genuine Ricoh parts in your Ricoh office product.

Power Source

- Type 1 : 220 - 240V, 50/60Hz, 10A or more
- Type 2 : 220 - 240V, 50/60Hz, 12A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see "Power Connection" in the "Copy Reference" manual.



Declaration of Conformity

"The Product complies with the requirements of the EMC Directive 89/336/EEC and the Low Voltage Directive 73/23/EEC."

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

 means **POWER ON.**

 means **STAND BY.**

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Notes


Some illustrations might be slightly different from your machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Operator Safety:

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains a GaAlAs four beam laser diodes array, 10-milliwatt, 770-810 nanometer wavelength for each emitter. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is located on the internal cover that is revealed when the front cover is opened.

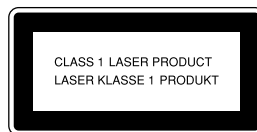

Laser Safety:

The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser sub-systems to the factory or service depot when replacement of the optical subsystem is required.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see ⇒ P.2 "Machine Types")

- Type 1 : 2885
- Type 2 : 28105

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, Rex-Rotary recommends that you use genuine Rex-Rotary toner.

Rex-Rotary shall not be responsible for any damage or expense that might result from the use of parts other than genuine Rex-Rotary parts in your Rex-Rotary office product.

Power Source

- Type 1 : 220 - 240V, 50/60Hz, 10A or more
- Type 2 : 220 - 240V, 50/60Hz, 12A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see "Power Connection" of the "Copy Reference" manual.

Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Notes


Some illustrations might be slightly different from your machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Operator Safety:

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains a GaAlAs four beam laser diodes array, 10-milliwatt, 770-810 nanometer wavelength for each emitter. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is located on the internal cover that is revealed when the front cover is opened.

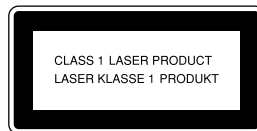

Laser Safety:

The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement of the optical subsystem is required.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see ⇒ P.2 "Machine Types")

- Type 1 : 3285
- Type 2 : 32105

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, Gestetner recommends that you use genuine Gestetner toner.

Gestetner shall not be responsible for any damage or expense that might result from the use of parts other than genuine Gestetner parts in your Gestetner office product.

Power Source

- Type 1 : 220 - 240V, 50/60Hz, 10A or more
- Type 2 : 220 - 240V, 50/60Hz, 12A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see "Power Connection" of the "Copy Reference" manual.

Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Notes


Some illustrations might be slightly different from your machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Operator Safety:

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains a GaAlAs four beam laser diodes array, 10-milliwatt, 770-810 nanometer wavelength for each emitter. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is located on the internal cover that is revealed when the front cover is opened.

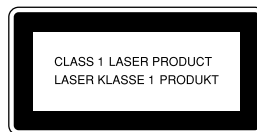

Laser Safety:

The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser sub-systems to the factory or service depot when replacement of the optical subsystem is required.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see ⇒ P.2 "Machine Types")

- Type 1 : D485
- Type 2 : D4105

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, Nashuatec recommends that you use genuine Nashuatec toner.

Nashuatec shall not be responsible for any damage or expense that might result from the use of parts other than genuine Nashuatec parts in your Nashuatec office product.

Power Source

- Type 1 : 220 - 240V, 50/60Hz, 10A or more
- Type 2 : 220 - 240V, 50/60Hz, 12A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see "Power Connection" of the "Copy Reference" manual.

Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.



Declaration of Conformity

"The Product complies with the requirements of the EMC Directive 89/336/EEC and the Low Voltage Directive 73/23/EEC."

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

 means **POWER ON.**

 means **STAND BY.**

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Notes

Some illustrations might be slightly different from your machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Operator Safety:

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains a GaAlAs four beam laser diodes array, 10-milliwatt, 770-810 nanometer wavelength for each emitter. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is located on the internal cover that is revealed when the front cover is opened.



Laser Safety:

The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement of the optical subsystem is required.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see ⇒ P.2 "Machine Types")

- Type 1 : 4850MF
- Type 2 : 4105MF

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, Infotec recommends that you use genuine Infotec toner.

Infotec shall not be responsible for any damage or expense that might result from the use of parts other than genuine Infotec parts in your Infotec office product.

Power Source

- Type 1 : 220 - 240V, 50/60Hz, 10A or more
- Type 2 : 220 - 240V, 50/60Hz, 12A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see "Power Connection" of the "Copy Reference".

This information is based on our present state of knowledge and is intended to provide general notes on our products and their uses.

It should not therefore be construed as guaranteeing specific properties of the products described or their suitability for particular applications.

Any existing industrial property rights must be observed. The quality of our products is guaranteed under our General Conditions of Sale.

Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.



Declaration of Conformity

"The Product complies with the requirements of the EMC Directive 89/336/EEC and the Low Voltage Directive 73/23/EEC."


In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

 means **POWER ON.**

 means **STAND BY.**

ENERGY STAR Program

ENERGY STAR®

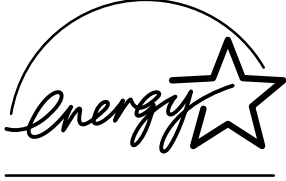

As an ENERGY STAR Partner, we have determined that this machine model meets the ENERGY STAR Guidelines for energy efficiency.

The ENERGY STAR Guidelines intend to establish an international energy-saving system for developing and introducing energy-efficient office equipment to deal with environmental issues, such as global warming.

When a product meets the ENERGY STAR Guidelines for energy efficiency, the Partner shall place the ENERGY STAR logo onto the machine model.

This product was designed to reduce the environmental impact associated with office equipment by means of energy-saving features, such as Low-power mode.

- **Low Power mode**
This product automatically lowers its power consumption 15 minutes after the last copying or printing job has been completed. Printing is available in this mode, but if you use the copier, press the **[Energy Saver]** key.
For how to change the default interval before entering Low Power mode, see "Energy Saver Timer" ⇒ P.10 "General Features".
- **Auto Off mode**
To conserve energy, this product automatically turns off 90 minutes (Type2:120 minutes) after the last copying or printing job has been completed. Printing is available in this mode, but if you use the copier, press the operation switch.
For how to change the default interval before entering Auto Off mode, see "Auto Off Timer" ⇒ P.10 "General Features".
- **Duplex Priority**
To conserve paper resources, the Duplex function (1-Sided → 2-Sided) can be selected preferentially when you turn on the operation switch, press the **[Energy Saver]** key, or the machine resets itself automatically. To change the Duplex Priority mode, see "Duplex Priority" of the "Copy Reference".

◆ **Specification**

		Type 1	Type 2
Low Power mode	Power consumption	312W	320W
	Default interval	15 minutes	15 minutes
	Recovery time	Less than 40 seconds	Less than 42 seconds
Auto Off mode	Power consumption	12W	12W
	Default interval	90 minutes	120 minutes
Duplex Priority		1-Sided → 1-Sided	

💡 **Recycled Paper**

Please contact your sales or service representative for recommended recycled paper types that may be used in this machine.

How To Read This Manual

Symbols

In this manual, the following symbols are used:

WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the "Safety Information" of the "Copy Reference" manual.

CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the "Safety Information" of the "Copy Reference" manual.

* The statements above are notes for your safety.

Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

Note

This symbol indicates precautions for operation, or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

Reference

This symbol indicates a reference.

[]

Keys that appear on the machine's panel display.

[]

Keys built into the machine's operation panel.

TABLE OF CONTENTS

Manuals for this Machine.....	1
Machine Types.....	2
1. User Tools (System Settings)	
<hr/>	
Keys for User Tools (System Settings)	3
Accessing User Tools (System Settings).....	5
Exiting from User Tools.....	6
User Tools Menu (System Settings)	8
Settings You can Change with the User Tools	10
General Features	10
Timer Settings	15
Tray Paper Settings	17
Key Operator Tools.....	19
INDEX.....	22

Manuals for this Machine

The following two manuals have been prepared for operating this machine: this manual describing how to make system settings for copying functions and the "Copy Reference" manual introducing the operating procedures for copying functions.

◆ **System Settings (this manual)**

 
 
 

Describes how to access the system User Tools to make the machine easier to use.

◆ **Copy Reference**

Describes the various copying functions from basic copying to more advanced functions such as reducing/enlarging copies or combining originals into one copy.


Machine Types

This machine comes in two models which vary in copy speed. To make sure which model you have, see the inside front cover.

	Type 1	Type 2
Copy speed	85 copies/minute (A4  , 8 1/2" x 11" )	105 copies/minute (A4  , 8 1/2" x 11" )
Printer unit	Option	Option

1. User Tools (System Settings)

Keys for User Tools (System Settings)

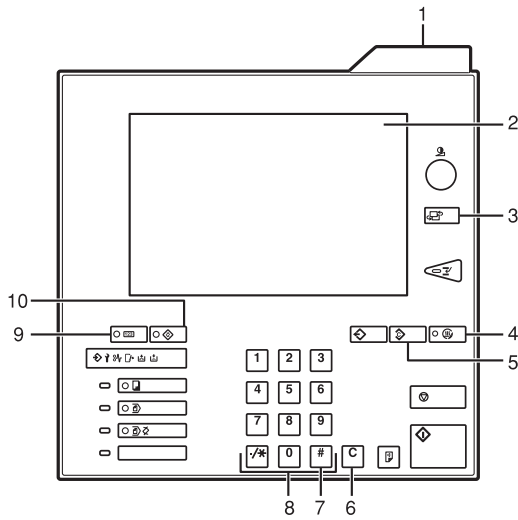

1. Status indicator

- The condition of the machine is distinguished by this indicator. By default, this indicator is turned off. You can specify whether to light the Status Indicator. See ⇒ P.10 "General Features"

Color	Status
Off	Main Power Switch is turned off or ready to make copies
Flashing green	Scanning originals
Lit green	Copying (Ready to scan originals)
Flashing red	Toner has nearly run out
Lit red	Paper jam or other malfunctions

2. Display panel

Shows operation status, error messages, and function menus.

3. [Language Selection] key

Press to select display language. By default, English is selected.

4. [Energy Saver] key

When you press and hold the key, the display disappears and the machine enters Energy Saver mode. When you press the key again, the machine returns to the Ready condition.

5. [Clear Modes] key

Press to clear any previously entered settings.

6. [Clear] key

Press to clear any previously entered numbers.

User Tools (System Settings)

7. **【#】 key (Enter key)**

Press to enter a value or confirm a setting.

8. **Number keys**

Use to enter the number of copies you wish to make. Also use to enter values for various features.

9. **【Counter】 key**

Press to check the total number of copies made.

10. **【User Tools】 key**

Press to access the User Tools menu where you can customize the default settings to your preference.

1

Accessing User Tools (System Settings)

This section is for the key operators in charge of this machine. With User Tools, you can change the machine's default settings.

1

Preparation

After using User Tools, be sure to exit them to return to Copy mode.

The key selected is highlighted.

 
The settings are not canceled even if the main power switch or operation switch is turned off or the **[Clear Modes]** or **[Energy Saver]** key is pressed.

Reference

For information on Copy User Tools, see the "Copy Reference" manual.


1 Press the **[User Tools]** key.

The User Tools Main Menu appears.



2 Press the **[System Settings]** key.


The system settings menu appears.

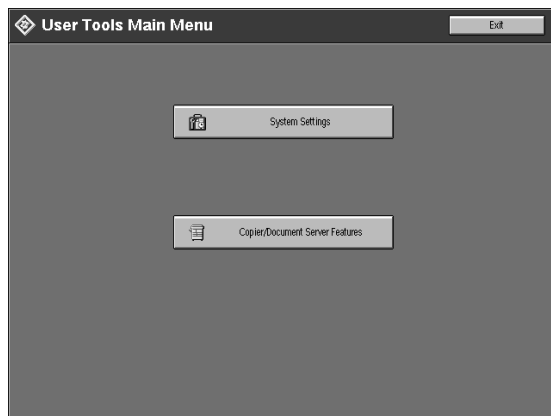

User Tools (System Settings)

3 Select the desired menu and touch the key.

1

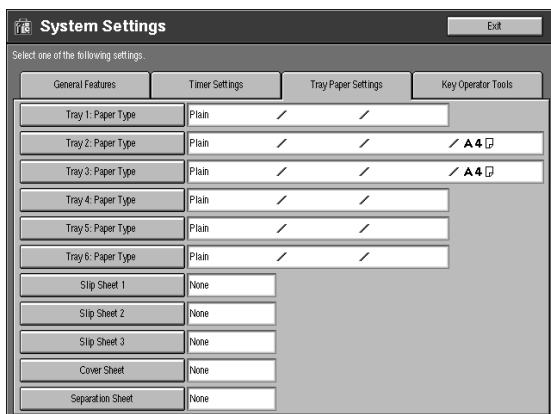

4 Change the settings by following the instructions on the panel display. Then press the [OK] key.

Note

- [OK]: Press to store the new settings and return to the previous menu.
- [Cancel]: Press to return to the previous menu without changing any data.

Exiting from User Tools

 
1 After changing the user tools settings, press the [Exit] key on the User Tools Main Menu.


 
Changing the system settings ends to return to Copy mode.



Note






- To cancel the change of the machine's default settings and return to the copy mode, press the [User Tools] key.
- You can also exit from User Tools by pressing the [User Tools] key.



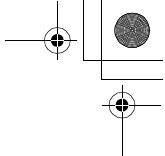

Accessing User Tools (System Settings)

   
1

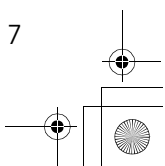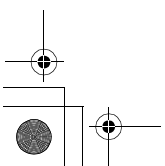


User Tools (System Settings)

User Tools Menu (System Settings)


1

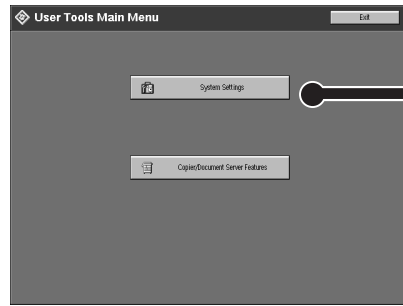

General Features

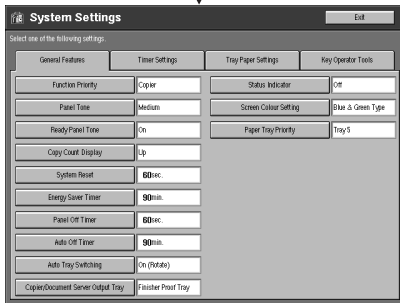

Timer Settings

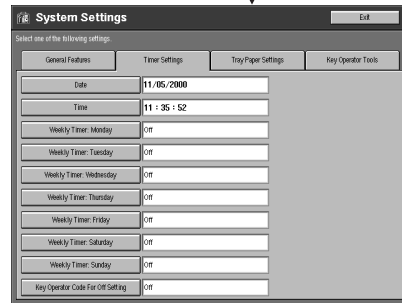

8

User Tools Menu (System Settings)

1

System Settings [Exit]

Select one of the following settings:

General Features	Timer Settings	Tray Paper Settings	Key Operator Tools
Function Priority	Copier	Sh. Indicator	On
Panel Tone	Medium	Screen Saver Setting	Shw. & Green Type
Ready Panel Tone	On	Paper Tray Priority	Tray 5
Copy Count Display	Up		
System Reset	60Sec.		
Energy Saver Timer	90min.		
Panel Off Timer	60Sec.		
Auto Off Timer	90min.		
Auto Tray Switching	On (Output)		
InterDocument Sensor Output Tray	Feeder Proof Tray		

Key Operator Tools

System Settings [Exit]

Select one of the following settings:

General Features	Timer Settings	Tray Paper Settings	Key Operator Tools
User Code: Copier/Document Sensor	On	Key Operator Access	On
Key Counter: Copier Access	On	User Code Display	Hide
		AOF (Keep B On.)	On
		Memory Allocation	Copier Priority
		Display/Print Counter	

Tray Paper Settings

System Settings [Exit]

Select one of the following settings:

General Features	Timer Settings	Tray Paper Settings	Key Operator Tools
Tray 1: Paper Type	Plain	/	/
Tray 2: Paper Type	Plain	/	/ A4 □
Tray 3: Paper Type	Plain	/	/ A4 □
Tray 4: Paper Type	Plain	/	/
Tray 5: Paper Type	Plain	/	/
Tray 6: Paper Type	Plain	/	/
Slip Sheet 1	None		
Slip Sheet 2	None		
Slip Sheet 3	None		
Cover Sheet	None		
Separation Sheet	None		

Display / Print Counter

System Settings [Exit]

Select one of the following settings:

General Features	Timer Settings	Tray Paper Settings	Key Operator Tools
User Code: Copier/Document Sensor	On	Key Operator Access	On
Display/Print Counter [Exit]			
▶ Total: 0000205			
▶ Printer: 0000000			
▶ Copier: 0000205			
▶ Duplex: 0000000			
▶ Staple: 0000000			
Print Counter List			

ZAJX010E

9






Settings You can Change with the User Tools

1







Reference

Regarding how to access the user tools, see ⇒ P.5 “Accessing User Tools (System Settings)”.

General Features



Menu	Description
Function Priority	<p>You can specify the mode that is displayed when the operation switch is turned on or System Reset is activated.</p> <p> Note <input type="checkbox"/> Default: <i>Copier</i></p> <p> Reference See “System Reset” ⇒ P.10 “General Features”.</p>
Panel Tone	<p>A tone sounds when a key is pressed. You can turn the tone on or off . You can also select the volume level from Low, Medium, and High.</p> <p> Note <input type="checkbox"/> Default: <i>On</i> (volume: Medium)</p>
Ready Panel Tone	<p>You can specify whether to sound the tone when the machine becomes ready for copying after Energy Saver mode is deactivated or the power is turned on.</p> <p> Note <input type="checkbox"/> When the “Panel Tone” is set to OFF, the tone does not sound even if the “Ready Panel Tone” is set to ON. <input type="checkbox"/> Default: <i>On</i></p>
Copy Count Display	<p>You can set the copy counter to show the number of copies in the current job made so far (count up) or the number of copies to be made (count down).</p> <p> Note <input type="checkbox"/> Default: <i>Up (count up)</i></p>







Settings You can Change with the User Tools

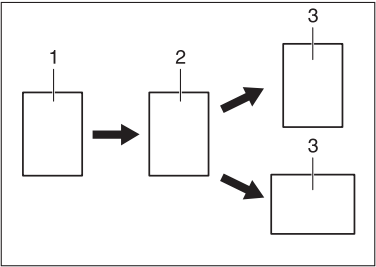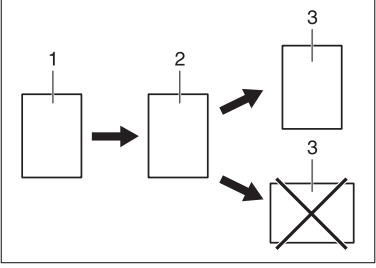Menu	Description
System Reset	<p>If no operation is performed for a selected time, the machine will automatically return to initially selected display. This function is called "System Reset". You can set the time between 10 and 999 seconds.</p> <p> Note <input type="checkbox"/> Default: 60 seconds</p>
Energy Saver Timer	<p>The machine enters the Energy Saver mode automatically a certain time after your job is finished. You can set the time between 1 and 240 minutes.</p> <p> Note <input type="checkbox"/> Default: 15 minutes (1 minute steps)</p>
Panel Off Timer	<p>The machine enters to the Panel Off mode automatically after your job is finished, after the selected time. You can set the time between 10 and 999 seconds.</p> <p> Note <input type="checkbox"/> Default: 60 seconds (1 second steps)</p> <p> Reference See "Auto Off Timer" ⇒ P.10 "General Features".</p>
Auto Off Timer	<p>The machine turns itself off automatically to conserve energy a certain time after your job is finished. This function is called "Auto Off". You can set the time between 1 and 240 minutes.</p> <p> Important <input type="checkbox"/> If you use these three functions (Energy Saver Timer, Panel Off Timer and Auto Off Timer), when your copy job ends, the machine will enter the Panel Off mode according to the Panel Off Timer after the specified time. Next, it will enter the Energy Saver mode according to the Energy Saver Timer after the specified time. Then it will turn itself off automatically according to the Auto Off Timer after the specified time.</p> <p> Note <input type="checkbox"/> Default:</p> <ul style="list-style-type: none"> • Type1: 90 minutes (1 minute steps) Type2: 120 minutes (1 minute steps) <p><input type="checkbox"/> Auto Off might not be effective when an error message is displayed.</p> <p><input type="checkbox"/> To return to the Ready condition from Auto Off, the machine requires the same warm-up time as the time for becoming ready after its power is turned on.</p>

User Tools (System Settings)

1

Menu	Description
Auto Tray Switching	<p>If you load paper of the same size in two or more trays, regardless of the paper direction, the machine automatically shifts to the other tray when the tray in use runs out of paper when using Auto Paper Select. This function is called "Auto Tray Switching". You can enable or disable this function.</p> <ul style="list-style-type: none"> <p>If you select [On (Rotate)] Auto Tray Switching function will take place for copying.</p>  <p>1: Original 2: Copy Paper (Tray 1) 3: Copy Paper (Other Trays)</p> <p>If you select [On (No Rotate)] Only when paper of the same size and direction is loaded, the machine will continue copying. If not, the machine will stop copying and instruct you to load paper.</p>  <p>1: Original 2: Copy Paper (Tray 1) 3: Copy Paper (Other Trays)</p>

Menu	Description
Auto Tray Switching	<ul style="list-style-type: none"> • If you select [Off]. When paper has run out, "Please load paper" will be displayed, and copying will be interrupted. <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: <i>On (Rotate)</i> <input type="checkbox"/> If you put recycled paper, special paper or translucent paper in paper trays and indicate them in the Tray Paper Settings menu, the Auto Tray Switching function is available to these trays only when their paper types are identical. <p> Reference</p> <p>See "4.Paper Size" ⇒ P.17 "Tray Paper Settings"</p>
Copier/Document Server Output Tray	<p>You can specify to which tray copies are delivered.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> You can select from the "Finisher Shift Tray" or "Finisher Proof Tray". <input type="checkbox"/> When using the staple function, this setting is ignored.
Status Indicator	<p>The condition of the machine is distinguished by the light called Status Indicator. You can specify whether to light the Status Indicator.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: <i>Off</i>
Language Priority	<p>This machine has two language displays. You can select the language to be displayed first.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: English (default)
Screen Colour Setting	<p>You can select the panel display color from four options: Blue & Green Type, Blue & Purple Type, Green Type, and Gray Type.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: <i>Blue & Green Type</i>

User Tools (System Settings)

1

Menu	Description						
Paper Tray Priority	<p>You can select the paper tray which will be selected as a default in the following conditions:</p> <ul style="list-style-type: none"> • When the operation switch is turned on. • When a System Reset or Auto Reset occurs. • When the [Clear] key is pressed. • When Auto Paper Select mode is selected. <div style="border: 1px solid black; padding: 10px; margin: 10px 0;"> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="padding: 5px;">Tray1</td> <td style="padding: 5px;">4</td> </tr> <tr> <td style="padding: 5px;">Tray2</td> <td style="padding: 5px;">5</td> </tr> <tr> <td style="padding: 5px;">Tray3</td> <td style="padding: 5px;">6</td> </tr> </table> <p style="text-align: right; font-size: small; margin-top: 5px;">GCTRAY0E</p> </div> <p>Note</p> <p><input type="checkbox"/> Default:</p> <ul style="list-style-type: none"> • When the optional LCT is installed: <i>Tray 4</i> • When the optional LCT is not installed: <i>Tray 1</i> 	Tray1	4	Tray2	5	Tray3	6
Tray1	4						
Tray2	5						
Tray3	6						
Original: F/F4 Size Setting	<p>Currently three types of F size are available; 8¹/₂" × 13", 8¹/₄" × 13" and 8" × 13".</p> <p>The document feeder or platen cover sensor cannot distinguish these 3 types of originals. This function is to set the F size in the document feeder or on the platen cover sensor. For F size original, Auto Paper Select or Auto Reduce/Enlarge functions base on this setting.</p> <p>Note</p> <p><input type="checkbox"/> Default: 8¹/₂" × 13"</p>						





Timer Settings

When entering Timer Setting mode, if a key operator code has already been set, you must enter the code (up to 8 digits).


Reference

See "Key Operator Access" ⇒ P.19 "Key Operator Tools".

1

Menu	Description
Date	<p>Set the date for the machine's internal clock.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> If the main power switch has been turned off for more than 20 days, the settings for the Year, Month and Day may be changed. In this case, set the correct Year, Month and Day. <input type="checkbox"/> You need to set this for the Weekly Timer to work properly. <input type="checkbox"/> According to the Year, Month and Day you set, Date Stamp is set. See "Date Stamp" in the Copy Reference manual.
Time	<p>Set the time for the machine's internal clock.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> If the main power switch has been turned off for more than 20 days, the settings for the Time may be changed. In this case, set the correct Time. <input type="checkbox"/> Enter times using the 24-hour clock (1 minute steps). <input type="checkbox"/> You need to set this for the Weekly Timer, Stamp, Document Server, and Job preset functions to work properly.
Weekly Timer: Monday Weekly Timer: Tuesday Weekly Timer: Wednesday Weekly Timer: Thursday Weekly Timer: Friday Weekly Timer: Saturday Weekly Timer: Sunday	<p>Set the times when you want the machine to turn itself on/off for each day of the week.</p> <p> Important</p> <ul style="list-style-type: none"> <input type="checkbox"/> The timers do not work if the main power switch is turned off or the power cord is unplugged. <input type="checkbox"/> To keep the power on throughout the day, set both the "On" and "Off" timers to zero. <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Enter times using the 24-hour clock (1 minute steps).

User Tools (System Settings)

Menu	Description
Key Operator Code For Off Setting	<p>Set a key operator code (up to 8 digits) to temporarily cancel the power off setting of the weekly timer.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> When the weekly timers are set and the operation switch is off, you can still use the machine by doing one of the following: <ul style="list-style-type: none"> • If the key operator code is set, turn on the operation switch and enter the code. • If the key operator code is not set, just turn on the operation switch.

1

 **About weekly timers**



The weekly timers allow you to restrict the use of the machine to certain times of the day and week. The machine will switch itself on and off everyday at the times you specified.

 **Note**

- When the power is turned off by the activation of the weekly timers, you can temporarily cancel the power off state by entering the key operator code (up to 8 digits) set in "Key Operator Code For Off Setting."
- You can specify "On" or "Off" only. For example, you can make the machine turn on Monday morning and off on Saturday evening.
- You cannot turn on or off the main power switch by the weekly timers.
- When "On" or "Off" is specified at the same time, "On" becomes effective.
- While an error indication is lit, "Off" setting is not effective.

Tray Paper Settings

1

Menu	Description
Tray1: Paper Type Tray2: Paper Type Tray3: Paper Type Tray4: Paper Type Tray5: Paper Type Tray6: Paper Type	You can specify the types and size of the copy paper set in the paper tray and make them indicated. You can set with the following steps. ① Paper Type ② Paper Color (Only for "Special Paper" or "Thick Paper") ③ Slip Sheet Copy In Duplex Mode (Only for "Normal" "Recycled Paper" or "Special Paper") ④ Paper Size (Only for Tray 2 and Tray 3)
	1. Paper Type <ul style="list-style-type: none"> • You can set only 1 type of copy paper in each paper tray. • When specifying, the following indications are displayed. "Recycled Paper" when recycled paper is specified. "Special Paper" when special paper is specified. "OHP Sheet" when OHP sheet is specified. "Translucent Paper" when Translucent paper specified. "Thick Paper" when thick paper is specified. "Tab Stock" when index tab paper is specified. • You can set the amount of copy shift on when Tab Stock is set in the tray. The Tab Stock can be set only in tray 4 or tray 5. You can set the amount of shift from 0 to 15mm (in 1mm steps), 0.0" to 0.6" (in 0.1" steps). • You can specify the "Thick Paper" with "Tab Stock" at the same time. In this case, you cannot punch on the index tab paper. <p> Note</p> <p><input type="checkbox"/> Default:</p> <ul style="list-style-type: none"> • Metric version: 13mm • Inch version: 0.5" <p>• You can set "Translucent Paper" and "Tab Stock" only in Tray 4 and Tray 5.</p>
	2. Paper Color <ul style="list-style-type: none"> • When specifying "Special Paper" or "Thick Paper", you can select the color from the following 12 options. • 1.None 2.Yellow 3.Green 4.Blue 5.Purple 6.Ivory 7.Orange 8.Pink 9.Red 10.Gray 11.User Colour Paper 1 12.Letterhead <p> Note</p> <p><input type="checkbox"/> Default: <i>None</i></p>

User Tools (System Settings)





1

Menu	Description
Tray1: Paper Type Tray2: Paper Type Tray3: Paper Type Tray4: Paper Type Tray5: Paper Type Tray6: Paper Type	<p>3. Slip Sheet Copy In Duplex Mode</p> <ul style="list-style-type: none"> You can specify Duplex Copy or 1 Sided Copy in the specified for slip sheets tray. However, if Translucent Paper, OHP Sheet, Thick Paper, or Tab Stock is specified, you cannot Duplex Copy. <p>Note</p> <p><input type="checkbox"/> Default: <i>Duplex</i></p> <p>4. Paper Size</p> <ul style="list-style-type: none"> If the specified paper size differs from the size of paper actually set in the paper tray, a paper misfeed might occur because the paper size is not detected correctly. <p>Note</p> <p><input type="checkbox"/> Default:</p> <ul style="list-style-type: none"> Metric version: Height 148-297mm, Width 210-432mm Inch version: Height 5.9-11.8", Width 8.3-17.0" If you wish to change the paper size sent in Tray 1, Tray 6 (Large Capacity Tray), please contact your service representative. If you wish to set custom size copy paper in Tray 2 and Tray 3, please contact your service representative. Concerning the Tray 2 and Tray 3, the machine will select the specified paper size. <p><input type="checkbox"/> Default:</p> <ul style="list-style-type: none"> Metric version: A4 <input type="checkbox"/> Inch version: 8¹/₂" × 11" <input type="checkbox"/>
Slip Sheet 1 Slip Sheet 2 Slip Sheet 3 Cover Sheet Separation Sheet	<p>You can specify any tray as a Slip Sheet 1, 2, 3, Cover Sheet, or Separation Sheet.</p> <p>Note</p> <p><input type="checkbox"/> Default: <i>None</i></p>




Key Operator Tools

When entering Key Operator Tools, if a key operator code has already been set, you must enter the code (up to 8 digits).



1

Menu	Description
User Codes: Copier/ Document Server	<p>You can specify whether to control User Codes. This setting is also valid for the copy server.</p> <p> Note <input type="checkbox"/> Default: <i>Off</i></p> <p> Reference For Registering a User Code, see "User Tools (Copy Features)", "Key Operator Tools" of the "Copy Reference" manual.</p>
Key Counter: Copier Access	<p>You can specify whether to control Key Counter. This setting is also valid for the copy server.</p> <p> Note <input type="checkbox"/> Regarding key counter availability and usage, please ask your service representative.</p> <p><input type="checkbox"/> Default: <i>Off</i></p> <p> Reference See "User Tools (Copy Features)", "Key Operator Tools" in the "Copy Reference" manual.</p>

User Tools (System Settings)

Menu	Description
<div style="position: absolute; top: 20px; left: 20px; background-color: #808080; color: white; padding: 5px; border-radius: 5px; width: 30px; text-align: center; font-weight: bold;">1</div> Key Operator Access	<p>You can specify whether to control the machine by the Key Operator Access code (the password to operate the settings of User Tools). If you wish to control it, you need to register the Key Operator Access code.</p> <ol style="list-style-type: none"> ① Choose "Off" or "On". ② When you choose "On", enter the Key Operator Access code (up to 8 digits) from the Number keys, and select "Primary Settings" or "All Settings" for the range of restriction. <ul style="list-style-type: none"> • When "Primary Settings" is selected: The Key Operator Access code will be set only for Timer Settings and Key Operator Tools on System Settings, and Key Operator Tools, Delete All The Saved Files, Delete All The Saved Files In CD and Key Operator Access code on Copier/Document Server Features. • When "All Settings" is selected: The Key Operator Access code will be set for the System Settings and all the items for the Copier/Document Server Features. • When "All Functions" is selected: The Key Operator Access code will be set for all the function on this machine. You cannot operate the machine unless you enter the Key Operator Access code after the machine is turned on. ③ Press the [OK] key. <p> Note <input type="checkbox"/> Default: <i>Off</i></p>
User Code Display	<p>You can specify whether to display user codes entered.</p> <p> Note</p> <p><input type="checkbox"/> When "Hide" is selected:</p> <ul style="list-style-type: none"> • The user code entered will not be displayed, but "✖" appears instead. <p><input type="checkbox"/> When "Display" is selected:</p> <ul style="list-style-type: none"> • The user code entered will be displayed with numbers. • In Copy Mode, user codes are displayed with numbers on the Job List screen. <p> Note <input type="checkbox"/> Default: <i>Hide</i></p>

Settings You can Change with the User Tools

Menu	Description
AOF (Keep It On.)	<p> Note <input type="checkbox"/> For details, contact your service representative.</p>
Memory Allocation	<p>You can select the hard disk memory allocation priority from two options.</p> <ul style="list-style-type: none"> ① Copier Priority ② Document Server Priority <p> Note <input type="checkbox"/> Default: <i>Copier Priority</i></p>
Display /Print Counter	You can have various counters displayed or printed.

1

INDEX

A

AOF (Keep It On.), 21
 Auto Off Timer, 11
 Auto Tray Switching, 12

C

Copier/Document Server Output Tray, 13
 Copy Count Display, 10
 Cover Sheet, 18

D

Date, 15
 Display/Print Counter, 21

E

Energy Saver Timer, 11

F

Function Priority, 10

K

Key Counter
 Copier Access, 19
 Key Operator Access, 20
 Key Operator Code for Off Setting, 16
 Keys for User Tools (System Settings), 3

L

Language Priority, 13

M

Memory Allocation, 21

O

Original
 Size Setting, 14

P

Panel Off Timer, 11
 Panel Tone, 10
 Paper Tray Priority, 14

R

Ready Panel Tone, 10

S

Screen Color Setting, 13
 Separation Sheet, 18
 Slip Sheet 1, 18
 Slip Sheet 2, 18
 Slip Sheet 3, 18
 Status Indicator, 13
 System Reset, 11

T

Time, 15
 Tray 1 Paper Type, 17
 Tray 2 Paper Type, 17
 Tray 3 Paper Type, 17
 Tray 4 Paper Type, 17
 Tray 5 Paper Type, 17
 Tray 6 Paper Type, 17

U

User Code Display, 20
 User Codes
 Copier/Document Server, 19
 User Tools (System Settings), 3

W

Weekly Timer Friday, 15
 Weekly Timer Monday, 15
 Weekly Timer Saturday, 15
 Weekly Timer Sunday, 15
 Weekly Timer Thursday, 15
 Weekly Timer Tuesday, 15
 Weekly Timer Wednesday, 15